

# CERTIFICATE OF CONFORMITY

JB44086

Customer: SCAPA TAPES UK LTD  
UNIT 15  
HUMPHREYS ROAD  
WOODSIDE INDUSTRIAL ESTATE  
DUNSTABLE  
LU5 4TD

Customer Order N°:  
Relevant Standards: PD6609  
BS EN ISO Standard: 14644 Class: 7


Model N°:	CLEAN ROOM	Serial N°:	
Commissioned / Validation By:	R. MANSFIELD	Witnessed By:	M.PEARCE
Commissioning / Validation Date:	19-Apr-11	Revalidation Due:	17-Apr-12
Av. Filter Velocity	14.7 air change	Filter Leak Test	Less than 0.001%
Av. Lighting Level	1258 Lux	Max Particle Count @ 0.5µ	6770
Temperature	14.8 °C	Max Particle Count @ 5.0µ	788
Relative Humidity	44.8 %RH	Pressure Differential	40 Pa

I certify that the above tests were carried out satisfactorily in accordance with the indicated Standard.

For Bassaire




For Customer

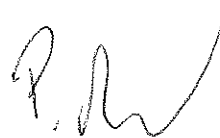


Registered No. 9401015

All readings have been taken  
with instruments calibrated traceably to  
National Standards, and in accordance  
with British Standards 5781: Part 1: 1992

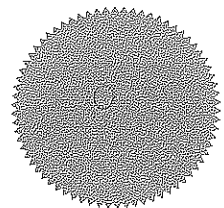

Invalid unless stamped

# CERTIFICATE OF CONFORMITY

JB44086


Customer: SCAPA TAPES UK LTD  
UNIT 15  
HUMPHREYS ROAD  
WOODSIDE INDUSTRIAL ESTATE  
DUNSTABLE  
LU5 4TD

Customer Order N°:  
Relevant Standards: PD6609  
BS EN ISO Standard: 14644 Class: 7


Model N°:	CHANGING ROOM	Serial N°:	
Commissioned / Validation By:	R. MANSFIELD	Witnessed By:	M. PEARCE
Commissioning / Validation Date:	19-Apr-11	Revalidation Due:	17-Apr-12
Av. Filter Velocity	17.73 air change	Filter Leak Test	Less than 0.001%
Av. Lighting Level	840 Lux	Max Particle Count @ 0.5µ	22889
Temperature	18.6 °C	Max Particle Count @ 5.0µ	931
Relative Humidity	46.4 %RH	Pressure Differential	28 Pa

I certify that the above tests were carried out satisfactorily in accordance with the indicated Standard.

For Bassaire




For Customer

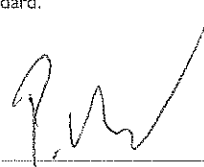


Registered No. 9401015

All readings have been taken  
with instruments calibrated traceably to  
National Standards, and in accordance  
with British Standards 5781: Part 1: 1992

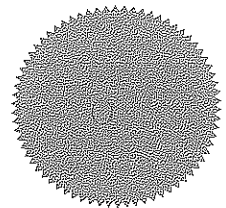

Invalid unless stamped